

OPERATOR'S MANUAL

version 4.1

VISUM

MONITOR



VISUM

FERTILIZER



J. ASSY
AGRICULTURAL

Visum Monitor	Manual v. 4.2	Product v. 3.1	Software v. 4.4 - 5.0
Visum Fertilizer	Manual v. 4.2	Product v. 4.0	Software -----

VISUM MONITOR | VISUM FERTILIZER

This device contains **FCC ID 2AD66-RF2401F20**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

For further information, please visit **www.fcc.gov**.

This device contains **IC ID 21278- RF2401F20**

IC compliance

This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:











- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Conformité aux normes d'IC

Cet appareil est conforme à la(aux) norme(s) RSS sans licence d'Industry Canada.

Son utilisation est soumise aux deux conditions suivantes:

- (1) Cet appareil ne doit pas causer d'interférences et
- (2) Il doit accepter toutes interférences reçues, y compris celles susceptibles d'avoir des effets indésirables sur son fonctionnement.

	Specifications	04
	Visum Monitor	04
	Visum Fertilizer	04
	Installation.....	05
	Visum Monitor	05
	Visum Fertilizer	06
	Recommendations	07
	Power Connection.....	08
	Connecting to a power plug inside of the tractor cab.....	08
	Connecting to the tractor battery.....	08
	Attach the antenna.....	09
	Network ID	10
	Operation	12
	Functions description	14
	Version 5.0 or below.....	14
	F1 List sensors	14
	F2 Beep volume	15
	F3 Brightness	15
	F4 Check Address.....	15
	F5 Add sensors	16
	F6 Show Monitor ID.....	16
	F7 Maneuver beep delay	17
	Troubleshooting table	18
	Cleaning and Storage.....	20
	Warranty	20
	Discarding	21



Operation Instructions

Specifications

VISUM

MONITOR

Radiofrequency communication at 2.4GHz.

GFSK Modulation.

Omni-directional antenna, 5dBi, 50 Ohms.

SMA connector.

Supply voltage: 10Vdc to 30Vdc.

Display with 2 character, 7 segments.

2 Red/Green/Orange LEDs.

Resistant to dust and water splash.



Specifications

VISUM

FERTILIZER

Resistant to dust and water jet.

Radiofrequency communication at 2.4GHz.

GFSK Modulation.

Internal antenna.

Dimension: 71mm (A) x 89mm (L).

Weight: 245g.


Internal diameter of the sensor: 45mm.

Wearing protection: Stainless Steel.

Outer diameter of the hose:
from 1 1/4 to 2 1/16".



Installation | Visum Monitor

1. Disassemble the bracket of the Monitor, removing the two side nuts.
2. Clean the installation surface with a cloth and alcohol.
3. Remove the film from the double-sided tape and fasten the bracket to the surface by pressing the whole area of the tape.
4. Wait for 15 minutes and then mount the Monitor on the bracket with the two side nuts.
5. If you install the bracket over a glass surface, put the anti-UV tape on the opposite side of the glass in order to protect the double-sided tape from the sun.
6. Press the  button to turn on the Monitor and hold it for 5 seconds to turn it off.

Alternatively, the tape may be removed to mount the bracket with screws or attached to a bar with clamps or RAM Mount kit (not included).





ATTENTION:

- The **Monitor** should be installed with the antenna in a vertical line, and should be avoid putting the antenna in the horizontal position.



- The **Monitor** should be installed with the best possible line of sight to the sensors in order to avoid communication problems.

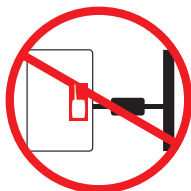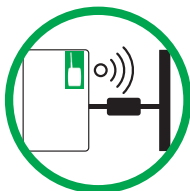


- Avoid installing the monitor close to the cab ROPS column. Keep a minimum distance of 12 in. between monitor and column.

Installation | Visum Fertilizer



TIP:

- Do not install the sensor flat. This will cause sensor wake up issues.

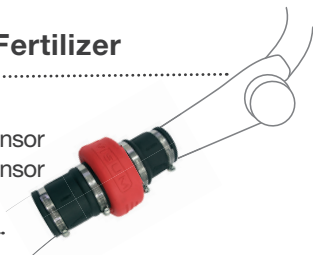

The sensor is installed between the diffuser/air release and the fertilizer outlet hose:

1 1/4"	1 1/2"	1 3/4"	2 1/16"

Choose the correct inlet and outlet coupler for the hose and diffuser diameters.



TIP:

- Do not bend the couplers to install in your system. That can increase clogging or release during use.



ASSEMBLY

1. Cut a piece of the hose at the diffuser side with the length of the sensor-coupler assembly, so that the total length will be the same as the original hose.

2. Place the sensor with the internal antenna facing “up” or “skyward”. The internal antenna is located to the left of the square patch with “P” and “L” between the “J” and “A” of the word J. Assy. See illustration below.

J.ASSY ✓



Sensor Assembly



1. Diffuser, 2. Inlet coupler, 3. Outlet coupler, 4. Metal clamps, 5. Hose.

Recommendations

3. Securely fasten the rubber couplers with the metal clamps¹. Do not “overtighten”. Check the hose clamps after 10 minutes of field operation to ensure everything is snug and maintaining good connections.




TIP:

- Do not point or align the sensor antenna toward a metal barrier, that could degrade the communication efficiency from the sensor to the monitor.



ATTENTION:

- Do not install the sensor upside down. Installation must match the orientation in the pictures below.

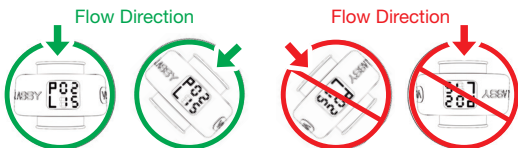


¹ 1, 75 em - 2, 75 em x 0312 em x 0021 in.

Power Connection

The power cable must be connected to 12Vdc to 24Vdc power source.

CONNECTING TO A POWER PLUG INSIDE OF THE TRACTOR CAB

1a. The installation kit will not be used, but a proper manufacturer harness (not included) will be needed.


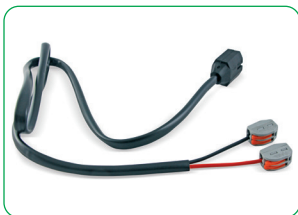


1b. Cut the power cable excess and mend the wires with the manufacturer harness.



CONNECTING TO THE TRACTOR BATTERY

- Use the included installation kit is detailed below.

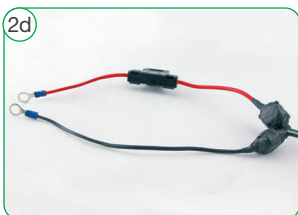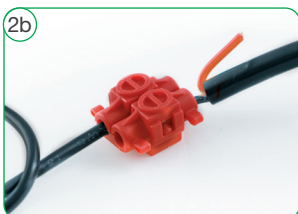

- The red connector must be protected with self-fusing tape.
- Preferably, the power cable should be connected directly to the battery terminals.

**ATTENTION:**

- Do not disconnect any others cables attached to the battery of the tractor. It may affect the functionality of other electronics in the tractor.

ATTACH THE ANTENNA

- You will find the antenna inside your Monitors box.
- Attach it to the back of the Monitor by threading on the connection. Do not “over-tighten”.
- Position the antenna so that it is in a vertical orientation.



All sensors must be configured with the network ID in order to communicate with the Monitor. The network ID can be found in the back of the Monitor or can be extract by software operation. The sensor configuration can be done with a Visum Monitor. Check how it can be done on this manual.

The following steps must be done:

1. Find the address indicator on the rubber cover (square with “P” and “L” and numbers).
2. Wake up the sensor by shaking it.
3. Place the magnet on the address indicator (make circular movement to easily turn on the internal switch).
4. Wait for the confirmation beep or message.
5. Fill the address indicator with the number of the implement and row.



ATTENTION:

- Never configure two sensors at the same time, even with two different devices, because the connections may cross each other.



TIP:

1. In order to change the address of any sensor, just follow the steps again.
2. Before doing the sensor “addressing procedure”, watch videos on Youtube by J.Assy (video Visum Monitor).
3. When installing the sensors on your machine initially, we recommend you “address” the sensors to the monitor on your workbench first before installing the sensors on the toolbar row units.

**TIP:**

4. Line up all your sensors on the workbench and write the row number on each first. Then add all the couplers and hose clamps.
5. Then you can either power up the monitor at the workbench with a 12V battery to complete the “Addressing” procedure, or carry the sensors to your tractor cab where you have installed the Monitor to complete the “Addressing” procedure.
6. After that then install the sensors on the toolbar/row unit at the air diffuser/air release. We recommend you install with the row numbers running from the left to the right (standing behind the toolbar facing the tractor cab) beginning with 1 to 12, 1 to 16 or however many rows you have to monitor.
7. Do not mount the monitor in the cab using a large high-powered magnet mounting kit or place a magnet near the monitor as it can cause the monitor to fail.



This is the area where you “ADDRESS” the sensor with the magnet that is included with the sensor.

Operation

- The Visum Monitor communicates with the flow sensors, indicating the presence or absence / blockage of flow.
- When you turn on the monitor the monitor should display a “00” on display and both LED should be OFF, indicating that no sensor has communicated with the monitor. That will happen every time that you turn on your monitor.
- Under normal conditions (sensors communicating and indicate flow), the display show two dashes and the LED of respect function (fertilizer or seed) will light up green, indicating that everything is Ok.
- The Monitor communicates only with sensors assigned to its ID, which is on a label on the back of the Monitor.
- In case of flow failure (absence or blockage), the Monitor will beep and the display will show the row number. Also, the LED related to the flow product (seed or fertilizer) will turn red.



- If the sensor loses the communication for more than 5 minutes the monitor will indicate missing sensor. In that case the monitor will beep and the display will show the row number. Also, the LED related to the flow product (seed or fertilizer) will blink orange – if your monitor is version **4.7** or higher- or turn orange – if your version is **4.6** or below*. If the Monitor is power cycled this sensor will no longer be listed.
- In case of MANEUVER² state a light will be whirling on the display and the LED related to the flow product (seed or fertilizer) will turn green.
- The monitor enter in MANEUVER state if 75% of the rows (or more than 8 sensors, if the implement have more than 12 rows) indicate no flow at the same time
- The Monitor gets out of maneuver state when more than 50% of the sensors indicate the presence of flow.
- To extend the life of the internal batteries, flow sensors are “sleeping” when they are not used. They wake up only when they detect motion, like when the implement moves, and the Monitor is on.



TIP:

- Each time that the monitor is turned on, check if all the sensors are present after 2 minutes of use. Use function F1 to do this.



ATTENTION:

- If the monitor enters the MANEUVER state during field operation check if there is a problem in a whole section.


*The **VERSION** is show every time that you turn your Monitor ON.



² MANEUVER state is typically when you are maneuvering on the headlands making turns or similar maneuvering situations when the fertilizer is not expected to be flowing. It can be detect as MANEUVER state if you turn off one section.



Functions description




For version 4.4 to 4.9

To activate the functions of the Monitor, hold the button  until the desired function appears on the display and then release the button.

For example, to enter in function F3 hold the button  and you will see F1 on display (do not release the button), then you will see F2 (do not release the button) then F3, at this point you should release the button  and follow the specific instruction for F3 function.



Version 5.0

Press the gear button  and hold on for 2 seconds to access the basic functions. To change to another function, press the gear button again . When you find the desired function press the on/off button  to enter the desired function.

F1 | List sensors



Lists all sensors present and shows the status of each one. Possible statuses are:

- **Green** Flow Ok
- **Red** Flow Failure
- **Orange** Missing Sensor³ (blinking for **version 4.7** or **superior**)

³ Missing sensor is when the monitor does not receive a signal from that sensor for more than 5 minutes.



F2 | Beep volume

Choose the beep volume.

1. Select **F2**
2. Select the desired volume by pressing button .
V0: Mute
V1: Low and bass sound
V2: Medium sound
V3: Loud and treble sound
3. Confirm by pressing button .

F3 | Brightness

Adjust the brightness of the LEDs and display.

1. Select **F3**
2. Select the desired brightness by pressing button .
b0: Low
b1: Medium
b2: High
3. Confirm by pressing button .

F4 | Check Address






Check the address of a sensor:

1. Select **F4**
2. When the display shows “Ch”, wake up the sensor (just shake it) and put the magnet on the row indicator on the rubber cover.
3. Monitor will display the row number and the 8 digits of the sensor ID.

The operation can be cancelled by pressing .

F5 | Add sensors

Add sensors to the network:

1. Select **F5**
2. Select the row number by pressing  and confirm by pressing .
3. When the display shows “Ad”, wake up the sensor (just shake it) and put the magnet on the row indicator on the rubber cover.
4. The operation can be cancelled by pressing .
5. When the configuration is finished, the display will show “ok”.
6. Press  to exit and go back to normal operation or press  to add the next sensor. In this case, you will be automatically sent to step 2 and the row number will be incremented by one.



TIP:

- After 10 seconds the added sensors should be listed by the function F1.



ATTENTION:

- All the sensors must be added to network when installing a new monitoring system.




F6 | Show Monitor ID

Show the 8 digits of the Monitor ID.

F7 | Maneuver beep delay

(ONLY FOR VERSION 4.7 OR SUPERIOR)

Set the time between one beep and another in maneuver state:

1. Select **F7**
2. Use the button  to change the value, the value select define the time in seconds between beeps.
 - a. If you select 40 the time between beeps will be 40 seconds.
 - b. The default time is 20 seconds.
 - c. If you wants a value lower than 20 seconds just hold the button  , after the number 99 it will go to number 01 and go higher again.
3. When the desired value is defined press  to confirm.



TIP:

- A more frequent beep is recommended when you are going to turn off a whole section for some task and should turn on this section after some time.



Troubleshooting table

Symptom	Possible Cause
Monitor doesn't turn on.	Bad power supply.
No sound from Monitor.	Wrong configuration.
Weak numbers on display.	Wrong configuration.
No communication from one sensor (no show on F1 list and/or alarm with orange LED).	Sensor is not on network.
No communication from several sensors (no show on F1 list and/or alarm with orange LED).	Bad network signal. No antenna is attached to the Monitor.
Maneuver state occurs during normal operation.	Several sensors informed no flow status.

If you need more assistance please contact our technical team to help you.

Actions

Check if the cable is intact.
Check if the is properly connected to a 12V-24V power supply (red-positive, black-negative).
Check if the fuse is plugged and intact.

Access function **F2** and change beep volume.

Access function **F3** and change brightness level.

Add sensor to the network with function **F5**.
Low battery. End of sensor life.

Check if the antenna is properly attached and in vertical position.
Try to move obstacles between antenna and sensors.
Put the monitor in a place with the best line of sight to the sensors.
Turn off any high-power radio source near to the implement.

Check if there is enough flow running on the pipes.
Check if there is a section turned off.



Cleaning and Storage

Most operators will thoroughly clean fertilizer equipment after the season of use to prevent corrosion and to keep everything looking and in good working order.

When cleaning with a power washer, avoid direct blast of high pressure water to the sensors and couplers as it may rip or degrade the rubber cover and rubber couplers. We recommend using low pressure water and brush with a mild soap solution.

Best results are achieved by removing the sensors and couplers from the machine and rinsing/wiping with a damp cloth or sponge with mild soap to remove all the fertilizer, soil and field grime and allowing them to dry. Do not leave the sensors immersed in water.

Be sure to clean the hose clamps as well and remove all the fertilizer and soil and allow them to dry before reinstalling. If the ROW number identification from the original installation is faded or difficult to read, use a paint marker to write the row number on each so you do not get them mixed up when you re-install them. This will save you time later.

The sensors can be stored as installed on the machine or kept inside during the “off season”.



Warranty

This product is warranted by J.Assy Agricultural to be free from defects in material and workmanship for two (2) years from date of purchase of the original purchaser.

Any sensor, coupler or monitor will be repaired or replaced at no charge with the same item if it is found to be defective under normal use and when installed, operated and cared for according to the manufacturer's instructions.

This warranty does not cover lost or stolen items or defects caused by accidents, fire, abuse or misuse of the product. This warranty does not cover coupler hose clamps.

This warranty does not cover Labor charges to remove or reinstall warranted product or replacement, transportation or mileage charges. For repair or replacement, return defective product to the original place of purchase.



Discarding

Dispose of properly. Recycling electronics conserves natural resources and minimizes the environmental impact of improper disposal.

